

 KAYAKS2FISH

# MAX DRIVE

U S E R M A N U A L




[WWW.KAYAKS2FISH.COM](http://WWW.KAYAKS2FISH.COM)

# 1 | Assembly Required

## MAX DRIVE™


①

Insert cranks into drums.

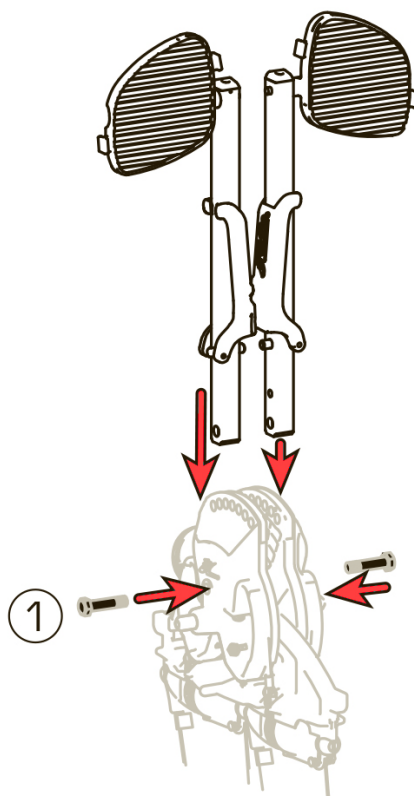

②

Tighten crank bolt using a 17mm wrench until the bolt is flush with the drum.

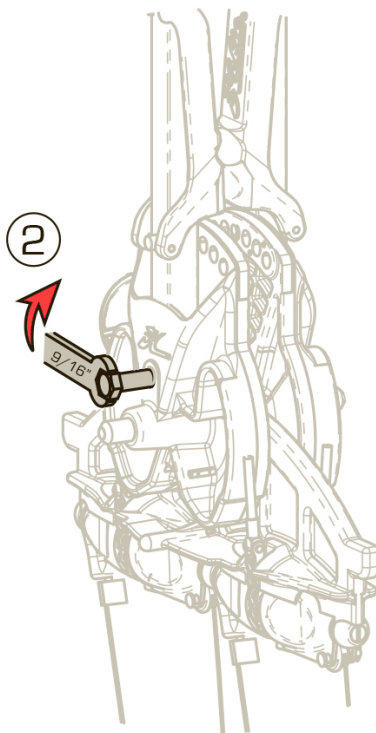


## 2 | MAX DRIVE™ Instruction

### Installation


①

Lower drive straight down making sure the spine is level

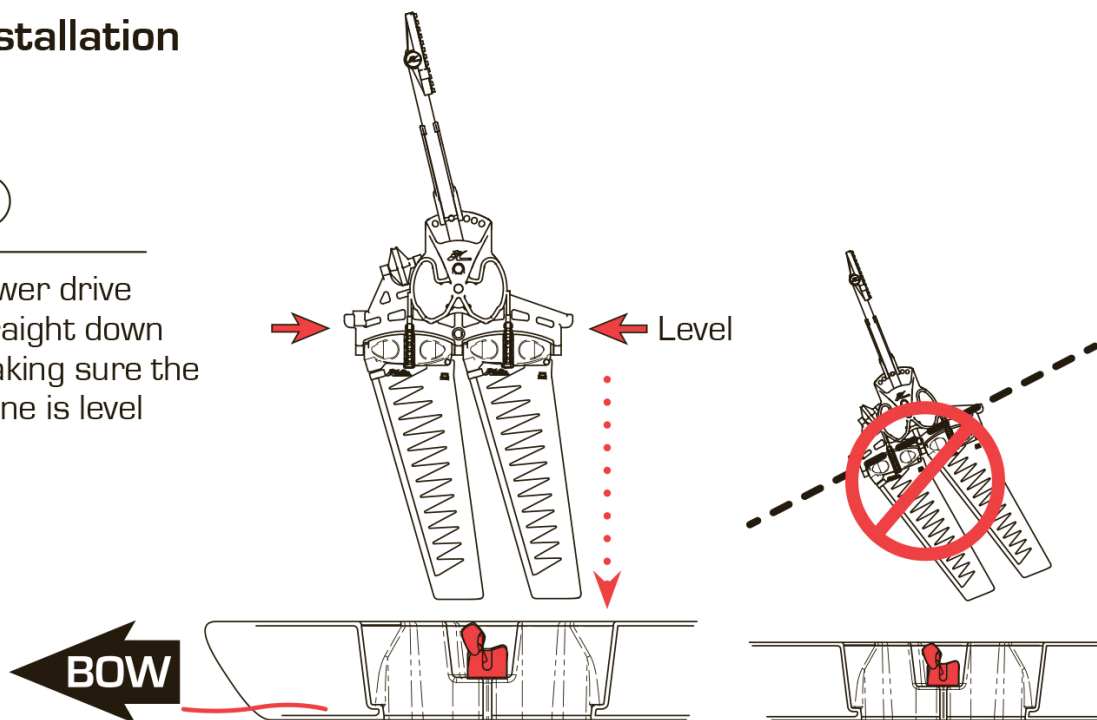

②


Press down and lock drive into pedal drive locks automatically when installed.

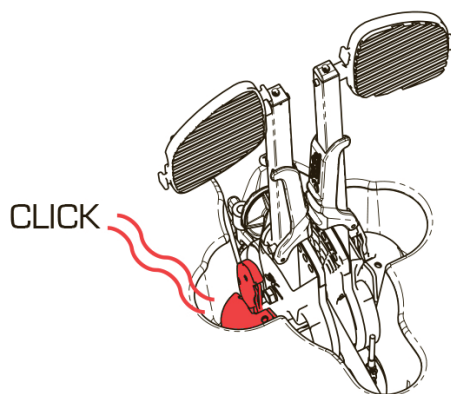

### Removal

①

Pull back each Click and Go lever

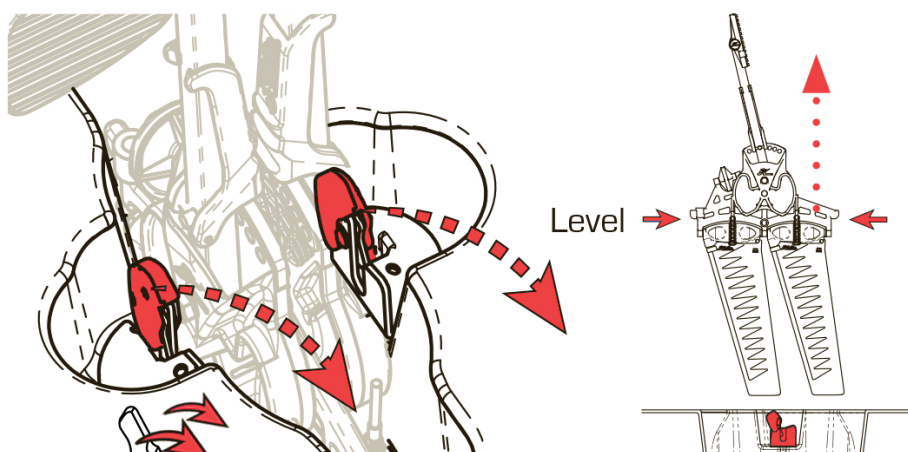

②

Lift drive straight up




### 3 | MAX DRIVE™ Instruction

#### Pedal Adjustment


①

Squeeze adjuster handle

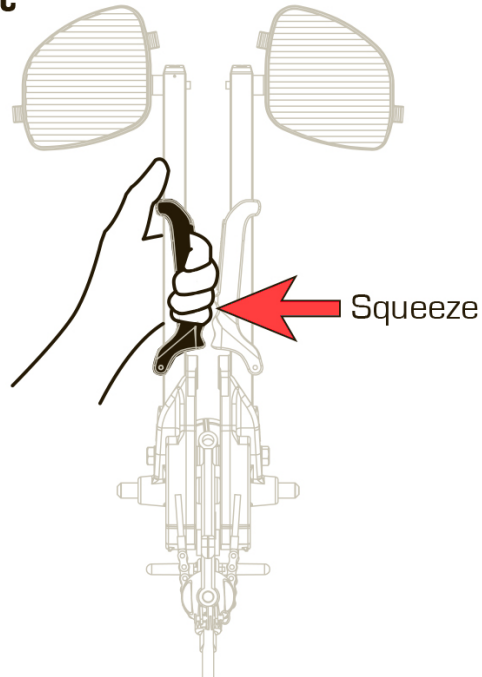


②

Adjust cranks to desired position by rotating and clicking them into the desired position. Make sure both cranks are in the same position number.

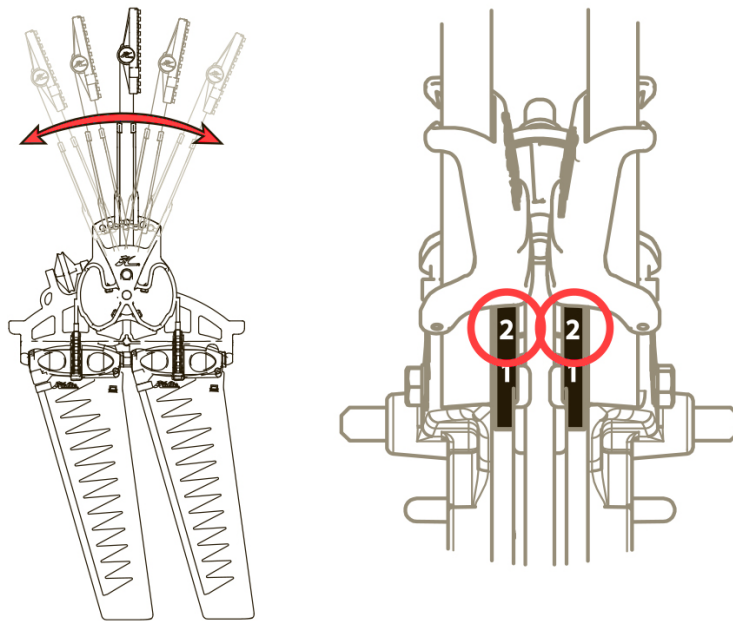


③


With both feet on the pedals and together (fins straight down), your knees should be comfortably bent and not over crunched or extended.

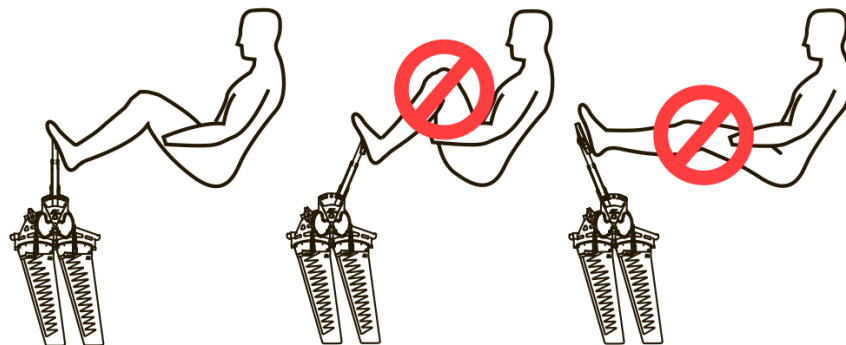

## MAX DRIVE™ Operation

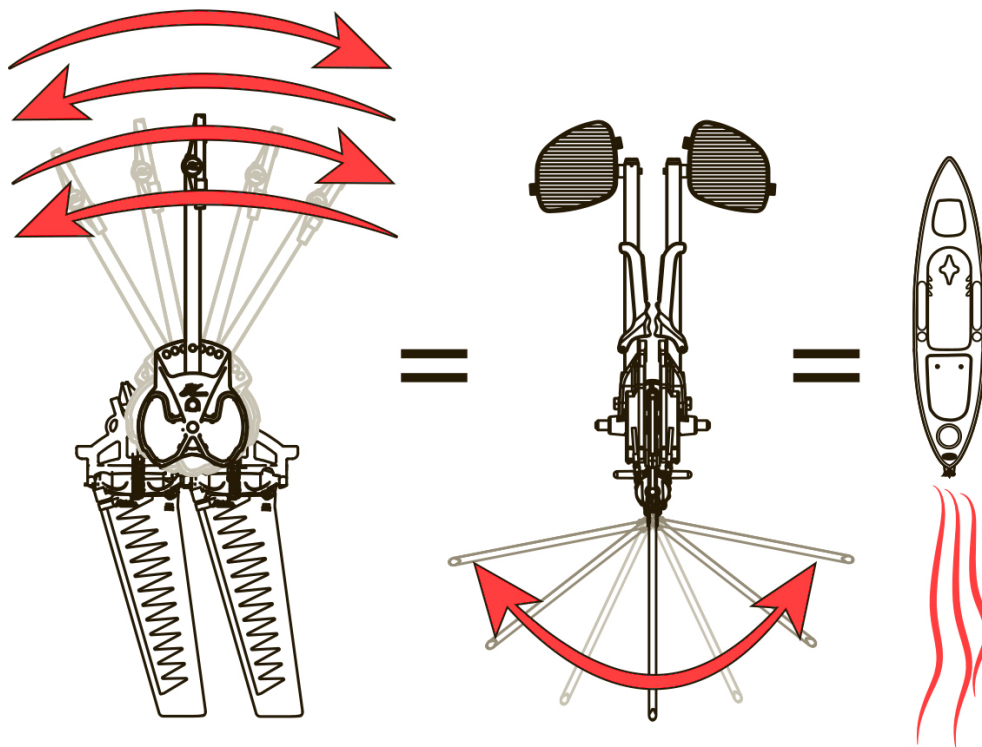


## Shallow Water + Beaching

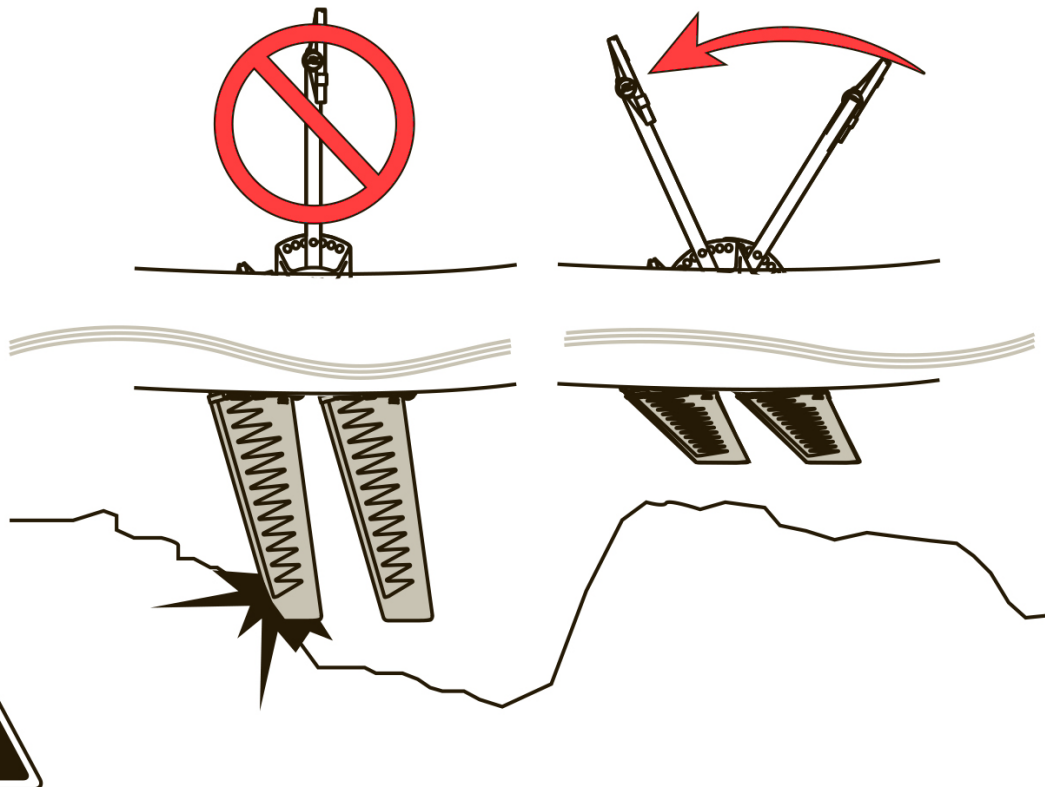

Press either pedal forward in shallow water to raise fins. Pressing one pedal fully forward will orient the fins with the kayak underside to allow beaching.

## 5 | Maintenance and Care

### MAX DRIVE™ Regular Maintenance

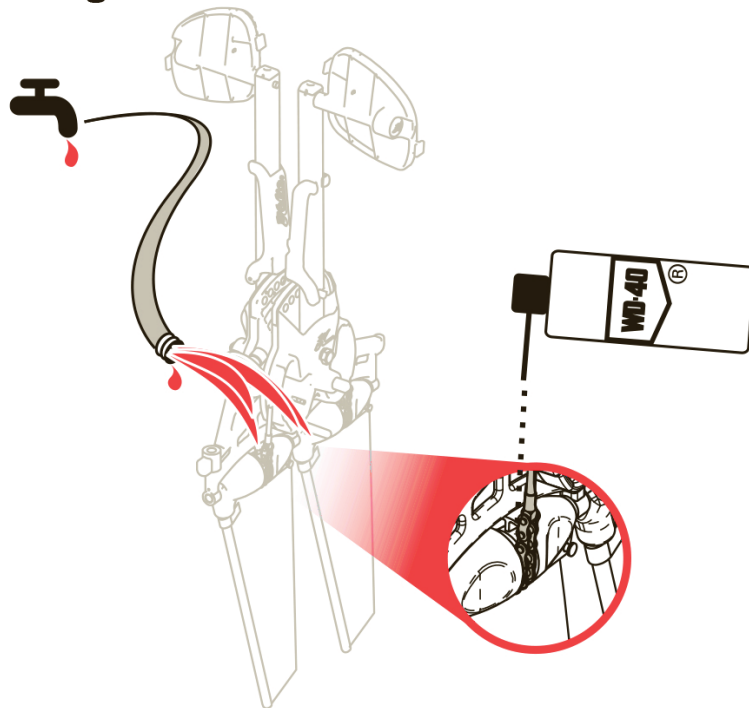

### Checking Cable Tension

